


# HVAC Wiring Diagrams With/Without START CAPs and Fan Circuits


#### No START CAP / Split RUN CAP - Fan Circuit Included

#### DISCONNECT ALL SUPPLY VOLTAGES BEFORE WORKING ON ANY EQUIPMENT.

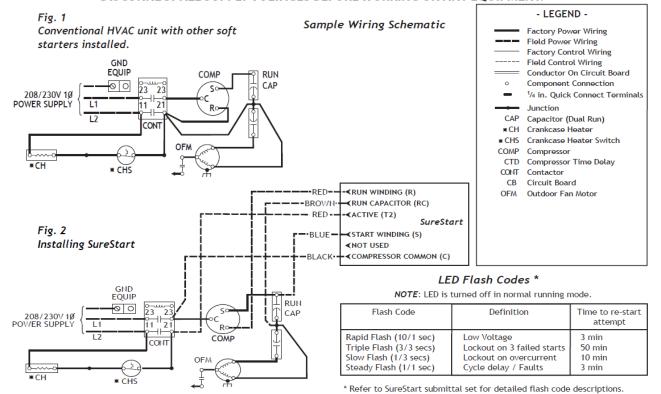

#### No START CAP / Split RUN CAP - Fan Circuit Not Included


#### DISCONNECT ALL SUPPLY VOLTAGES BEFORE WORKING ON ANY EQUIPMENT.

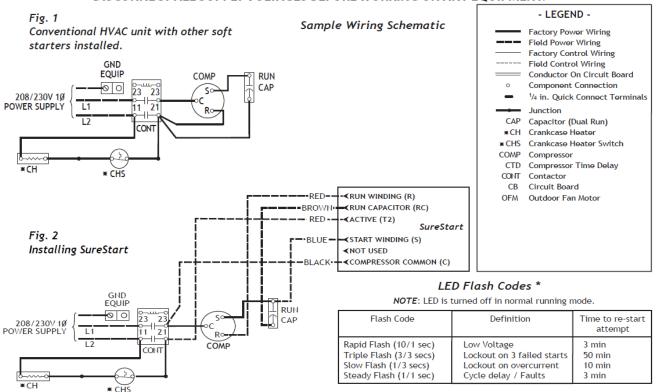

<sup>\*</sup> Refer to SureStart submittal set for detailed flash code descriptions.


#### START CAP / Dual RUN CAP - Fan Circuit Included

#### DISCONNECT ALL SUPPLY VOLTAGES BEFORE WORKING ON ANY EQUIPMENT.

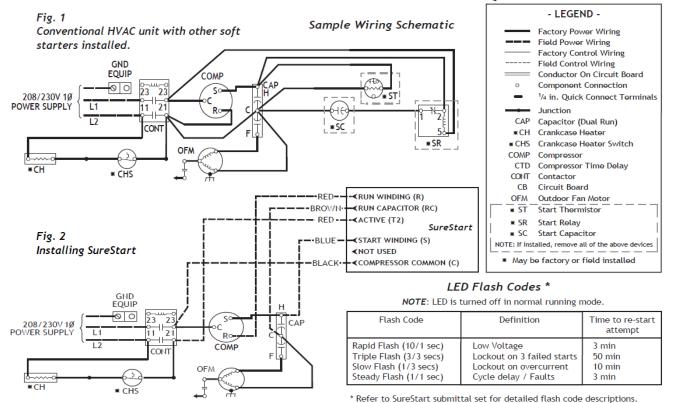


#### START CAP / Split RUN CAP - Fan Circuit Included

### DISCONNECT ALL SUPPLY VOLTAGES BEFORE WORKING ON ANY EQUIPMENT.

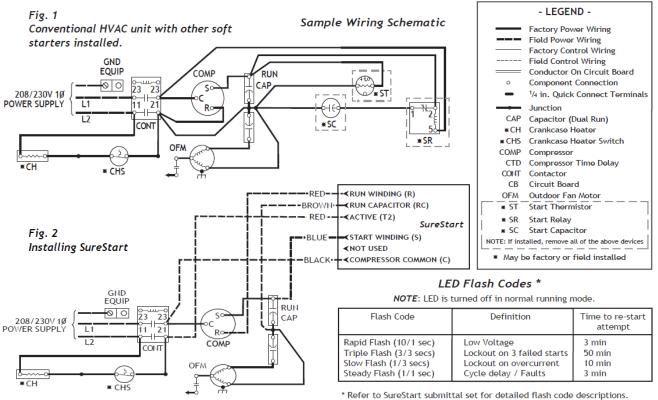


#### START CAP / Split RUN CAP - Fan Circuit Not Included

#### DISCONNECT ALL SUPPLY VOLTAGES BEFORE WORKING ON ANY EQUIPMENT.

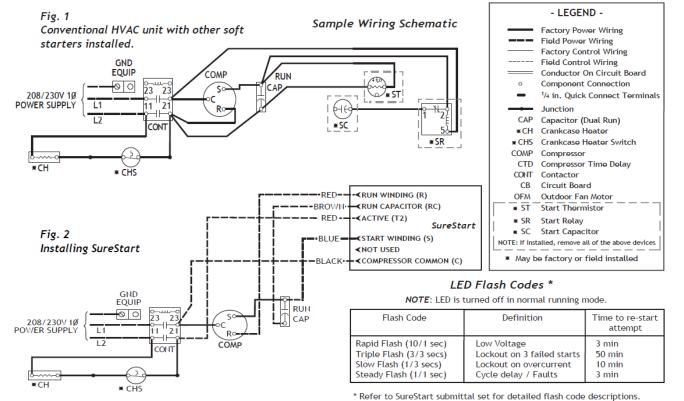

## No START CAP / Dual RUN CAP - Fan Circuit Included

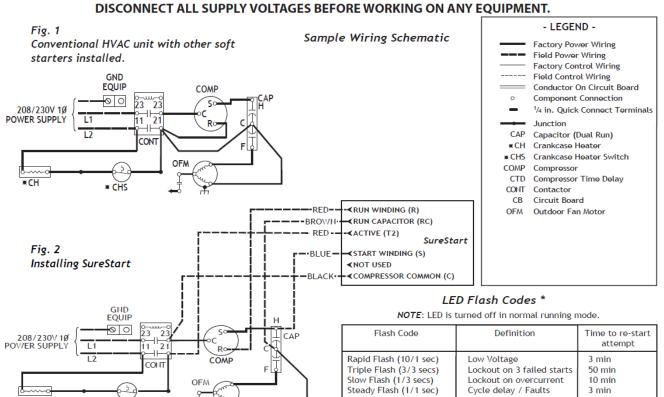

<sup>\*</sup> Refer to SureStart submittal set for detailed flash code descriptions.